



User Manual V1.2 20.04.2022





WARNING	Э
INTRODUCTION	4 - 5
PREPARATION BEFORE TAKE-OFF	6
EQUIPMENT	7 - 9
INFLATION AND FLIGHT TECHNIQUE	10 - 12
RAPID DESCENTS : ALTERNATIVE METHODS	19
FLIGHT INCIDENTS	14
MAINTENANCE	15
REPAIRS	16
LINE PLAN	17
MEASUREMENTS TABLE	18
MATERIALS	19 - 20



WARNING

Warning : read this user manual before first flight !

CAUTION !

Improper use of the equipment can cause serious and irreversible injuries, which may even lead to the death of both pilot and passenger. Neither manufacturer nor dealer endorse or is responsible for the misuse of the equipment. It is the own pilot's responsibility to use his or her equipment properly.

This manual offers you all the information you need to get familiar with the characteristics of your new wing.

This manual is for information purposes only. It is by no means to be regarded as flight instructions. Flight training can only be guaranteed and provided by a competent and authorised training structure. Only regulatory authorities of the practice from the respective country can determine the pilot's competence.

Each country has its own regulations and laws regarding paragliding. It is your responsability to know and comply with the regulation of the region you are flying in. Make sure your piloting and training level are in correlation with the classification of this equipment.

We reserve the right to modify the contents of this manual at any time. We therefore invite you to regularly consult our website : www.levelwings.com







Who
The I
It is ir The c
The o
Certi
Air Tu
The I
It car

INTRODUCTION

ho is the FORCE intended for?

e FORCE is a tendem paraglider that will best meet the requirements of pilots.

- s intended for professional and/or leisure pilots who want an easy-to-flight and high-performance wing.
- e design and choice of materials have been thought out for intensive and long-lasting use.
- e development and tests were carried out with professional pilots in order to be as close as possible to the expectations of commercial pilots.

ertification

- r Turquoise laboratory carried the tests out.
- e FORCE tandem has been certified EN Classe B.
- can be used with most harnesses and attachments intended for tandems available on the market.



PREPARATION BEFORE TAKE-OFF



When first used

It is important to perform a thorough pre-flight check : Check that the lines are correctly connected and that there are no knots. Check that the riser straps are not twisted or rolled up. Check the general appearance of the wing (attachment point, seam, fabric). Finish with an inflation to control the general aspect of the wing once inflated.

For each use :

Unfold the wing and place it in an arc on the upper surface, leading edge up.

Separate A, B, C, D risers and the brakes ; make sure risers and lines don't make any knots and are free.

Check that :

- trims are set symmetrically in the neutral position
- harnesses, straps and carabiners are not altered
- all attachments are correctly connected (risers, spreaders, rescue parachute, harnesses, etc.)

Dime




	41	Size (m2)
	5	Number of risers
	54	Number of cells
Candy	41	Flat area (m2)
	15	Wingspan (m)
	3,3	Cord (m)
	5,5	Flat aspect ratio
	34,7	Projected area (m2)
	4,1	Projected aspect ratio
	120 - 220	Weight range TWF
Apple	* Attachment points width: 55 ±2 cm	ensions of pilot and passenger harnesses used for certification
	70 - 80	Brake range at TWF max (cm)



EQUIPMENT



- 1 : A Riser
- 2 : A' Riser
- 3 : B Riser
- 4 : C Riser
- 5 : D Riser
- 6 : Adjustable brake pulley
- 7 : Brake pulley setting
- 8 : Removable trim webbing
- 9 : Big Ears blocker system
- 10 : Main attachment point
- 11 : Negativ trimming -2cm
- 12 : Neutral position
- 13 : 50% position
- 14 : Leading edge
- 15 : Lower surface

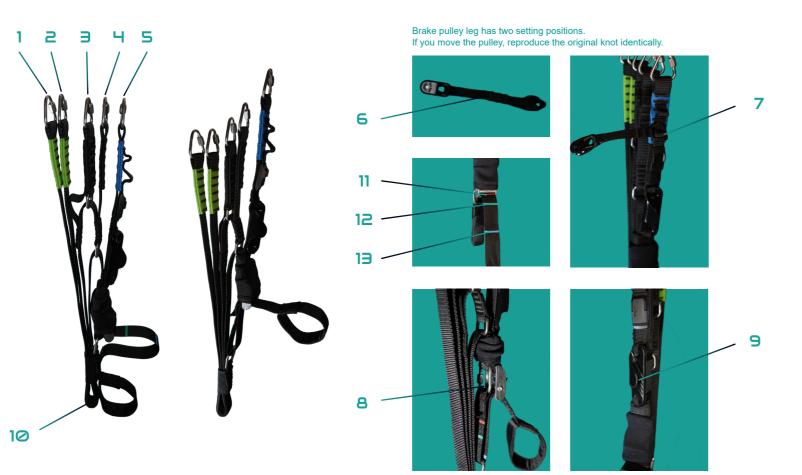








Banana handle

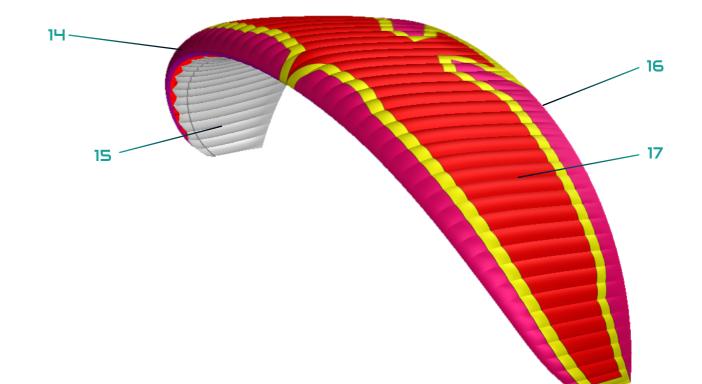



INFLATION AND FLIGHT TECHNIQUE



	Turning
Take-off	In order to
The FORCE will offer you a progressive and easy inflation in any flight condition, both in light winds and in strong winds. Despite this, before the first flight, practice inflation to familiarize yourself with your new wing. It is possible to inflate facing or back to the wing depending on take-off conditions.	You may a Make sure until you ol
	You can re
Forward launch :	Londing
To inflate with your back to the wing, take the A and A' risers in hand at the level of the shackles, move forward gradually, adapting your	Landing
pace to the wind conditions. When the wing is above your head, do a tempo and a visual check of the wing before deciding to accelerate in order to take off.	Make sure
	When app
Reverse launch :	Land into t
If the direction and speed of the wind is suitable, we advise you to inflate facing the wing in order to facilitate visual control. The pilot positions himself or herself facing the glider and his or her passenger facing the slope. For inflation facing the wing, take only the A risers.	During fina complete s Be careful
Apply a slight impulse to the risers to start inflation, adapting your movement to that of the wing in order to facilitate the tempo. Once the wing is stabilized and controlled at the zenith, the pilot turns around and begins the launch run. Make sure you never take off without having carried out all the safety checks.	Use of trir
	If you need
Trimmers position:	Blue mark
We advise you to take off on the « neutral » position. However you can adapt this setting (symmetrically) depending on the conditions.	We advise
	The neutra
	We recom

INFLATION AND FLIGHT TECHNIQUE

- to initiate a turn after checking that the space is clear, apply weight to the side where you wish to turn.
- ask the passenger to go along.
- ire you are not braking on the oposite side, then gradually lower the brake control on the side where you have applied the weight, obtain the desired inclination.
- regulate the radius and the speed of rotation using the outer control.

ire beforehand that you have enough altitude to make an approach adapted to the aerological conditions and terrain used.

- oproaching, avoid any committed manoeuvre or excessive braking.
- the wind, away from any turbulence.
- inal phase, maintain maximum speed until you are about to make contact with the ground, gradually brake your wing until you come to a stop.
- ful not to brake too early and too suddenly, this would lead to pitching up again.

rims

- eed more speed, releasing the trimmers will allow you to accelerate.
- rk is for 50%
- se you to use full speed (fully released trims) with caution and not to fly close to the ground or in turbulent conditions with this setting. tral position is shown by a green mark on the trim strap.
- We recommend using this position for standard use (take-off, flight, landing).
- If you wish to slow the wing down, pull on the trimmers strap to bring it to the negative position.
- You can use this position in flight when your wing loading factor is high.
- The negative position is shown by a red mark on the trim strap.



INFLATION AND FLIGHT TECHNIQUE



Active piloting

Active piloting is the flying technique that will help you fly with greater safety and enjoyment.

It means flying in coherence with the wing, along with pendular movements, pitching and rolling axes, and anticipating actions in order to stay in control and safe.

If the air is smooth the wing feedback can be minimal, but in turbulence feedback is continuous and needs to be constantly checked by the pilot.

Such reactions become instinctive in good pilots.

In order to get the best performance from the wing, the pilot should try to control it through small brake inputs and weight-shift, rather than constantly being present on the brakes.

A small movement early is more efficient than a big brake movement later to control the wing.

The more you let the glider fly at trim speed, the better performance you will get out of it.

The objective of active piloting is to get the glider to fly smoothly through the air with a stable position above the head, and controlled angle of incidence.

Your paraglider is highly resistant to collapse without any pilot action at all, but learning how to fly actively will increase this safety margin even further.

RAPID DESCENTS : ALTERNATIVE METHODS

Substitution steering commands

If you are unable to activate the brake control, you can control your wing using the D risers.

- To make a course change, grab the D riser on the side you want to turn and pull it down.
- Be careful that piloting with the D risers must be carried out with caution: stall occurs more quickly than when piloting with the brakes.

Descent in 360° turns

- To initiate a 360° turn, ensure that the airspace is clear, lean on the inside of the turn then gradually operate the control on the desired side. The wing will accelerate gradually, regulate the rotation speed using the brake.
- To exit the rotation, return to a neutral position in the harness and gradually raise the control of the inner side of the turn .
- You can slightly brake the outer side to accelerate the exit.
- Be careful that too drastic an exit will result in a large pitching up then down, that will need to be controlled.
- This manoeuvre causes a great centrifugal force, which can have physical consequences on the pilot and the passenger : disorientation, temporary loss of vision (black veil).
- In accordance with the EN B certification, the **FORCE** has no tendency to neutral spiral and comes out of rotation autonomously.

Big Ears

Big Ears is a rapid descent technique, because it decreases surface area and increases sink rate.

In order to use this technique on the **FORCE**, grab the A' risers. Pull gradually on one of the two, until the wingtip collapses. It is better to engage one ear at a time. To maintain Big Ears for a long time, you can use the blocker system located on the D risers. When using the blocker system, be sure to anticipate the reopening by releasing the blocker line.

B risers descent

This manoeuvre is very physical (even impossible) to carry out with a tendem. We advice against using this method of rapid descent.

Aerobatic manoeuvres

The FORCE is not designed for aerobatics.

Any extreme or repeated aerobatic maneuvre can damage your wing.





Parachutal stall

If you notice that the wing descends vertically without horizontal speed and that it is partially deflated, you are certainly experiencing a prachutal stall.

If this happens, fully raise the brakes (up to the pulleys) and if necessary release the trimmers symmetrically. Make sure you resume normal flight before touching the controls again.

Stall

Stall will only occur in the event of exagerated inputs to the control by the pilot. This maneuver is very physical and can be dangerous. It is not a safe rapid descent technique.

Spin / Asymmetrical stall

A spin will only occur in case of pilot error. If it happens, pull the brakes all the way up (to the pulleys) and control the resulting nose-down pitch.

Asymmetrical collapses

Your wing may occasionally collapse due to turbulence or pilot error.

During a collapse, keep your heading, move away from the relief while keeping a straight and stabilized flight. To do this, you must apply the maximum weight on the open side of the wing and, if necessary, accompany this movement with an adapted action on the same side control. If the closed side does not open spontaneously, repeat the operation as many times as necessary.

Frontal collapses

In case of frontal collapse, the glider is designed to open spontaneously according to the standard. Take care not to brake the wing to stimulate the resumption of flight.

MAINTENANCE

Cleaning

It is best not to clean your wing. However, if necessary, we advise you to use a damp cloth without soap nor detergent. Apply in small areas and be sure to let the wing dry thoroughly before using or packing it.

Storage and transportation

When you are not using your wing, store it in a dry, temperate place protected from UV rays.

Make sure the wing is totally dry before storing it.

For transportation : protect the wing from all external aggresions it could suffer, such as : tearings, cutings, crushings, UV rays. Put it in a sturdy enough bag.

Maintenance

Your wing's maintenance must be done on a regular basis.

We recommend that you have your glider fully checked by a specialist workshop every 24 months or every 100 flying hours.

Between these checks, we recommend that you be mindful of :

- Lines condition : folds, damages or cuts.
- Wing condition : holes, tears, premature wear
- Risers condition : straps, seams, attachment points.

We also recommend changing the spreaders and carabiners at least every 5 years, or as soon as they show signs of wear.





Repair

Your wing may suffer damages due to external aggression. In this case, it must be checked and repaired in a specialized workshop. Items such as risers, brake pulleys or control handles can be ordered from your LEVEL WINGS dealer.

Recycling

All our materials are selected for their excellent technical and environmental characteristics.

You can recycle most of the components, none of them are dangerous for the environment.

If you consider that your FORCE has reach the end of its life, you can separate all metal and plastic parts and apply the selective sorting rules in force in your country.

Regarding the recovery and recycling of textile parts, we invite you to contact the organizations guaranteeing the management of fabrics.

Environmental friendliness


Paragliding is an outdoor activity. You evolve in an environment for which you are responsible. So be sure :

- * To respect the local flora and fauna
- * Not to throw your waste on the ground
- * Not to generate more noise than necessary.

You thus participate in the preservation of the environment and activity.





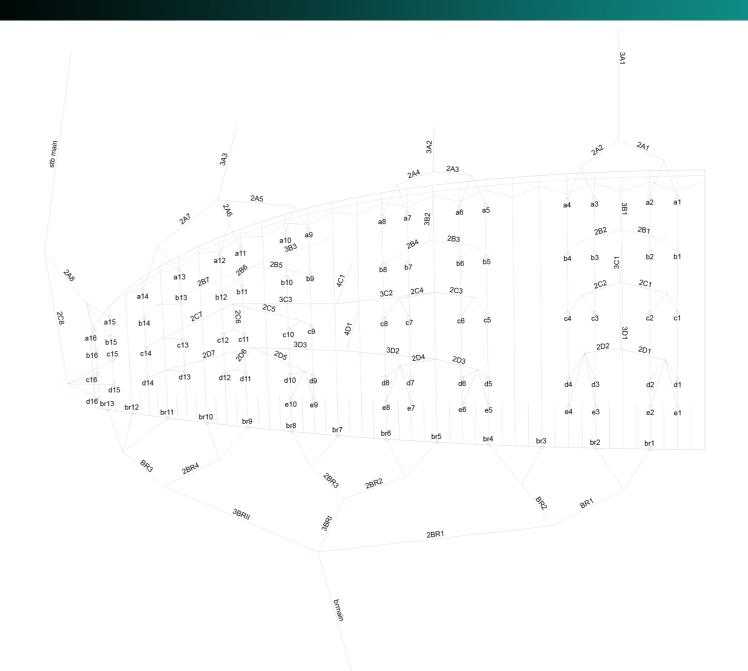

	18
LEVEL WINGS	



Lines

Tolerence margin ± 10 mm


a1	8566	b1	8459	c1	8502	d1	8632	e1	8728	br1	9520
a2	8502	b2	8394	c2	8423	d2	8542	e2	8649	br2	9169
a3	8477	b3	8370	c3	8397	d3	8514	e3	8621	br3	8956
a4	8502	b4	8398	c4	8435	d4	8571	e4	8667	br4	8879
a5	8472	b5	8365	с5	8528	d5	8632	e5	8724	br5	8889
a6	8434	b6	8328	с6	8449	d6	8536	e6	8635	br6	8770
a7	8410	b7	8311	с7	8360	d7	8454	e7	8545	br7	8715
a8	8430	b8	8337	c8	8365	d8	8478	e8	8558	br8	8745
a9	8343	b9	8284	c9	8289	d9	8404	e9	8485	br9	8628
a10	8277	b10	8221	c10	8253	d10	8367	e10	8442	br10	8474
a11	8128	b11	8084	c11	8187	d11	8305			br11	8361
a12	8081	b12	8044	c12	8179	d12	8307			br12	8255
a13	8001	b13	7978	c13	8187	d13	8339			br13	8225
a14	7976	b14	7963	c14	8239	d14	8419				
a15	7621	b15	7569	c15	7600	d15	7670				
a16	7507	b16	7518	c16	7538	d16	7676				

Risers

Tolerence margin ± 5 mm

	CLOSED	OPEN
Α	375	400
Α'	375	400
В	375	395
С	375	414
D	375	450

Lines Material





_				_				-			
a1	PPSL 120	b1	PPSL 120	c1	PPSL 120	d1	PPSL 120	e1	PPSL 120	br1	PPSL 120
a2	PPSL 120	b2	PPSL 120	c2	PPSL 120	d2	PPSL 120	e2	PPSL 120	br2	PPSL 120
a3	PPSL 120	b3	PPSL 120	c3	PPSL 120	d3	PPSL 120	e3	PPSL 120	br3	PPSL 120
a4	PPSL 120	b4	PPSL 120	c4	PPSL 120	d4	PPSL 120	e4	PPSL 120	br4	PPSL 120
a5	PPSL 120	b5	PPSL 120	c5	PPSL 120	d5	PPSL 120	e5	PPSL 120	br5	PPSL 120
a6 a7	PPSL 120	b6	PPSL 120	c6	PPSL 120	d6 d7	PPSL 120	e6	PPSL 120	br6	PPSL 120
a7	PPSL 120	b7	PPSL 120	с7	PPSL 120	d7	PPSL 120	e7	PPSL 120	br7	PPSL 120
a8	PPSL 120	b8	PPSL 120	c8	PPSL 120	d8	PPSL 120	e8	PPSL 120	br8	PPSL 120
a9	PPSL 120	b9	PPSL 120	c9	PPSL 120	d9	PPSL 120	e9	PPSL 120	br9	PPSL 120
a10	PPSL 120	b10	PPSL 120	c10	PPSL 120	d10	PPSL 120	e10	PPSL 120	br10	PPSL 120
a11	PPSL 120	b11	PPSL 120	c11	PPSL 120	d11	PPSL 120			br11	PPSL 120
a12	PPSL 120	b12	PPSL 120	c12	PPSL 120	d12	PPSL 120			br12	PPSL 120
a13	PPSL 120	b13	PPSL 120	c13	PPSL 120	d13	PPSL 120			br13	PPSL 120
a14	PPSL 120	b14	PPSL 120	c14	PPSL 120	d14	PPSL 120				
a15	PPSL 120	b15	PPSL 120	c15	PPSL 120	d15	PPSL 120			BR1	PPSL 120
a16	PPSL 120	b16	PPSL 120	c16	PPSL 120	d16	PPSL 120			BR2	PPSL 120
										2BR2	PPSL 120
2A1	TSL 220	2B1	TSL 220	2C1	PPSL 160	2D1	PPSL 120			2BR3	PPSL 120
2A2	TSL 220	2B2	TSL 220	2C2	PPSL 160	2D2	PPSL 120			2BR4	PPSL 120
2A3	TSL 220	2B3	TSL 220	2C3	PPSL 160	2D3	PPSL 120			BR3	PPSL 120
2A4	TSL 220	2B4	TSL 220	2C4	PPSL 160	2D4	PPSL 120				
2A5	TSL 220	2B5	TSL 220	2C5	PPSL 120	2D5	PPSL 120			2BR1	PPSL 275
2A6	TSL 220	2B6	TSL 220	2C6	PPSL 120	2D6	PPSL 120			3BRI	PPSL 275
2A7	TSL 220	2B7	TSL 220	2C7	PPSL 120	2D7	PPSL 120			3BRII	PPSL 275
2A8	TSL 220			2C8	TSL 220						
										brmain	TSL 380
3A1	TSL 500	3B1	TSL 380	3C1	TSL 280	3D1	TSL 280				
3A2	TSL 500	3B2	TSL 380	3C2	TSL 280	3D2	TSL 280			stb main	TSL 280
3A3	TSL 380	3B3	TSL 380	3C3	TSL 280	3D3	TSL 280				
				4C1	TSL 280	4D1	TSL 280				
					102 200						

Dimensions and lengths have been controled by Air Turquoises Test Laboratory.







Matériaux tissu

INTRADOS	DOKDONZØDMF MJ32
EXTRADOS	SKYTEX 38
Suported PROfiles,ROD	SKYTEX 40 HARD
UNSUported PROfiles,ROD,V.T-TAPES, diagonals	SKYTEX 32 HARD

Matériaux élévateurs

Webbing Poly: Untreated 70221–20mm Black	20mm	Gouth & Wolf	Riser
Webbing Poly: Untreated 70221–25mm Black	25mm	Gouth & Wolf	Riser
Webbing Nylon 25mm Black (Trim) with Print	25mm	Dandy tapes	Riser
MAGIC DE PRO 3mm GREY	Эmm	Liros	Riser
Webbing nylon Rib 15mm Black	15mm	Dandy tapes	Riser
15mm GG Webbing	15mm	Dandy tapes	Riser
Technora webbing 13mm Black	13mm	Liros	Riser
DELTA INOX MR 3.5		Peought	Riser

LEVEL WINGS

SpeedFly.org Montvenix,73700 Bourg Saint Maurice France